


The motor is positioned in the centre of the headrail, with a gold collar on each side. Before configuring your remote control, please ensure each cord spool is positioned to match the rings/ tape pockets on your blinds. Once cord spools are positioned and locked into place, release the gold collars from each side of the motor, slide them along the bar to the meet cord spool. Now tighten in place with allen key. You are now ready to set your open and close positions. This can be done in your workroom, with the blind hanging and power connected to the motor. If for any reason you have difficulty in programming your new Somfy system, please refer to our website for online tutorial. Alternatively, you can contact our customer service team on 0115 9738 708 for more information.




Attention

Do not set the Upper blind position in which the fabric is fully pressured against the headrail, as this could damage the motorised product and/or the motor long term. We recommend the battery is fully charged, and the open and close positions are set before going to site.


1. Clear the motor's memory.

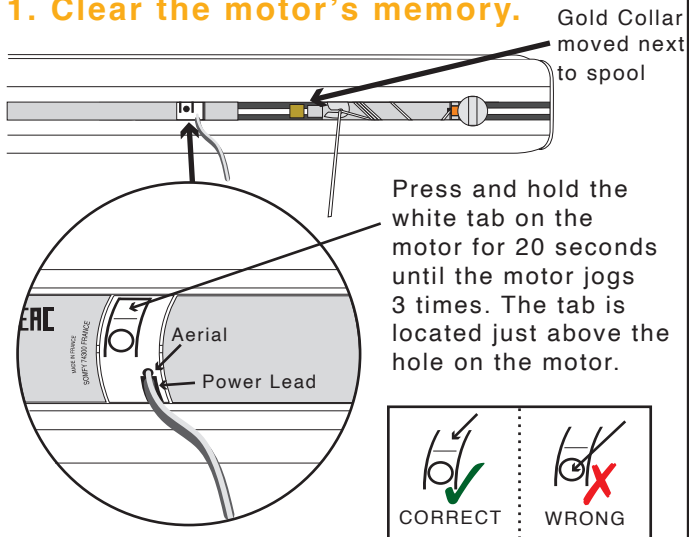


2. Connect the remote to the blind.

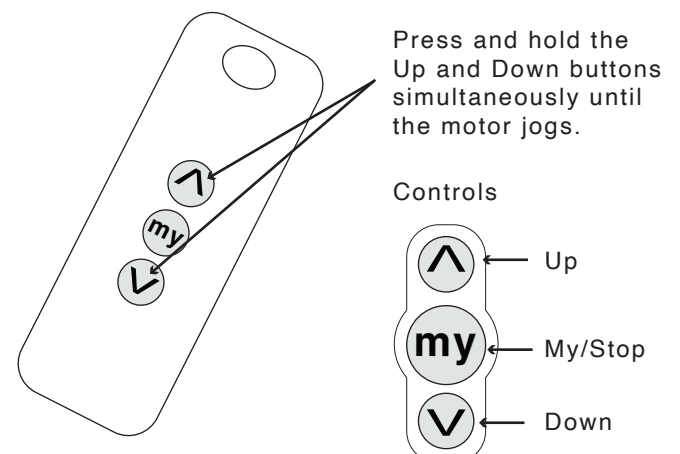

3. Check the motor rotation direction.

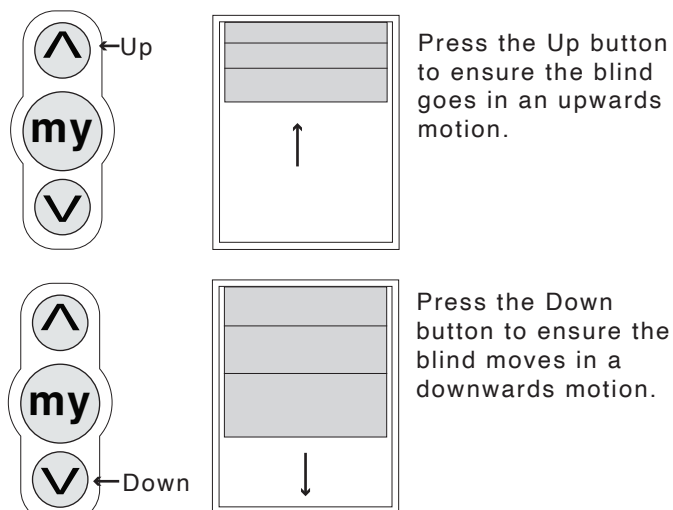


4. Changing the motor rotation.

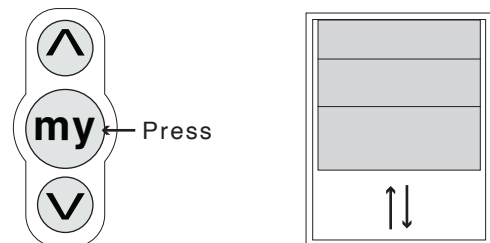

Press and hold down the My button for two seconds. When the motor jogs this indicates the motor rotation has been changed. Please go back to box number 3 to confirm motor rotation is now correct.

If the motor rotation is correct please move to box number 5.
If you wish to change the rotation see box number 4.


5. Setting the closed position.

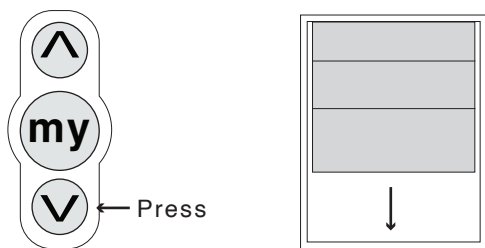

Press and hold the Down button until the blind is in the desired closed position.

Please note: while setting this position the blind movement will be slow and stop every 10 seconds. Simply lift your finger off the button then place back on immediately to continue movement.

6. Setting the open position.

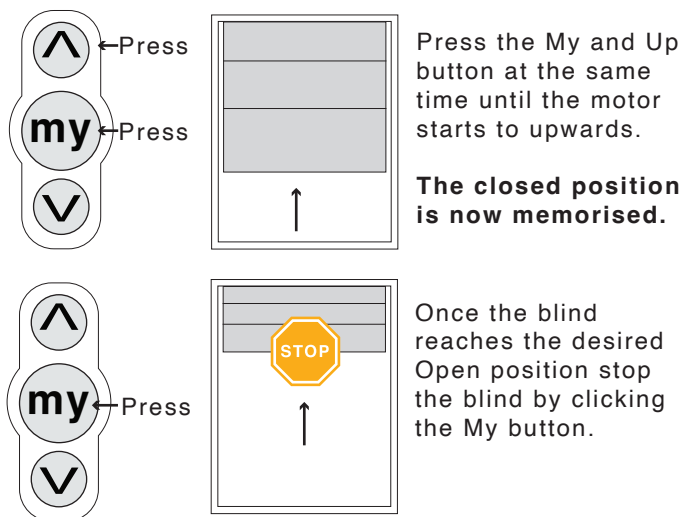


Press the My and Up button at the same time until the motor starts to upwards.

The closed position is now memorised.

Once the blind reaches the desired Open position stop the blind by clicking the My button.


7. Memorising the open position.

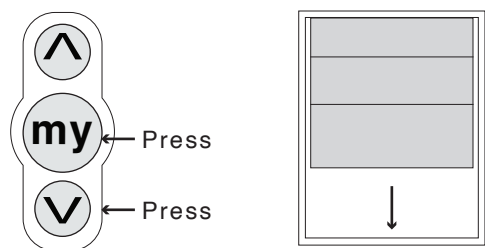

Press the My and DOWN button simultaneously. The blind will automatically stop at the previously set closed position.


The Open position is now memorised.

8. Confirming the the settings.

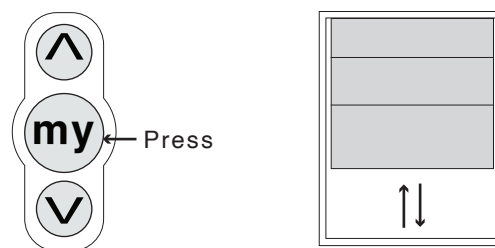

To confirm the open and close settings, press and hold the My button until the motor moves up and down. The positions are now programmed.


9. Exit the programming mode.

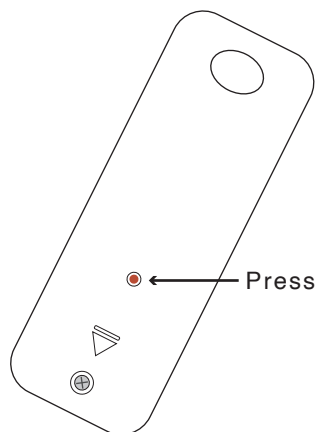

The motor is still in programming mode. To exit this mode quickly press the red programme button found on the back of the remote.

The motor will jog up and down to confirm the motor is now programmed.

10. Operating the remote.

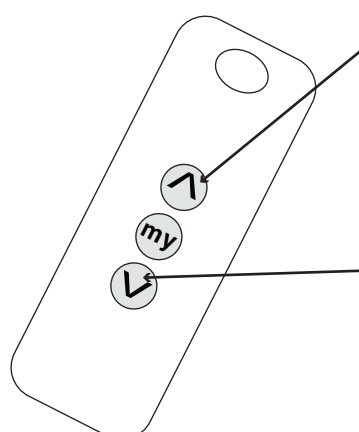

Press the Up button once firmly and the blind will automatically find the set open position. Hold the Up or Down button if you wish to adjust the position.

Press the Down button once firmly and the blind will automatically find the set Closed position. Hold the Up or Down button if you wish to adjust the position.

Tel: 0115 9738 708

sales@jones-interiors.com

www.jones-interiors.com