


How to measure for a curtain pole

Window Frame length + 30cm + Finial length = Desired Curtain Pole length

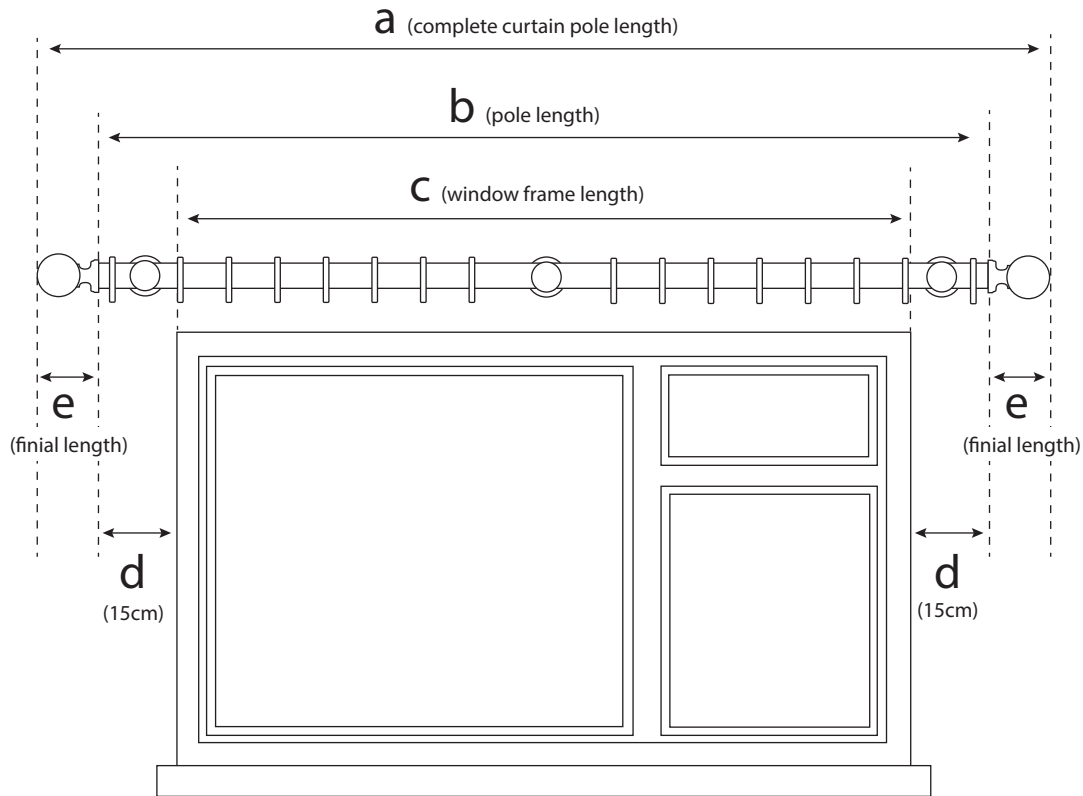

Instructions

- 1) Measure the window frame that the curtain pole is to go above (**shown in figure c**).
- 2) Add an extra 30cm (15cm each side) to ensure the curtains clear the window and can be drawn back (**shown in figure d**). Please note: 15cm is the industry standard however, heavy curtains may require a little more space.
- 3) Allow room for your chosen finial design. (**shown in figure e**).
- 4) You now know the size of the pole required to fit the window.