




Mark the positions of the end brackets 100mm (approx) either side of the window frame and also the centre position for pole longer than 180cm.

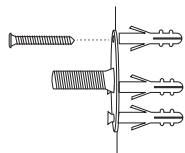




Drill the hole for the wall plugs supplied and fit the bracket mounting plate. Alternative wall fixing should be used where necessary.

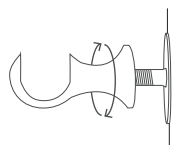


Screw the bracket onto the back plate until tight ensuring the cup is facing upwards.

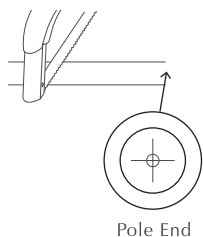


Measure the pole and cut to size. Poles over 180cm ensure that both halves are cut to the same size. Use a mitre saw for a square cut. Drill 3mm holes exactly in the centre of the pole ends using the template below.

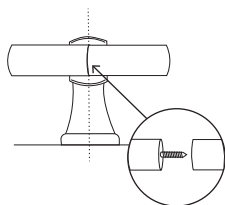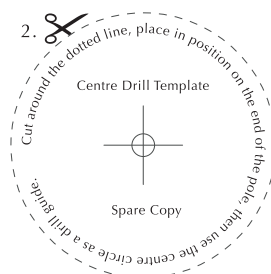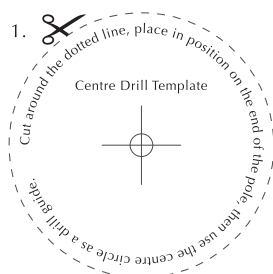

Use the double ended joining screw to connect two halves and align this join with the centre of the middle bracket.

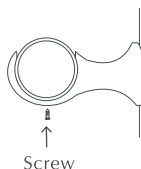

Fit the required number of rings and position the pole on the brackets before securing with the small screw provided.

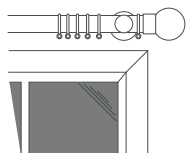

Position the last ring on the outer side of the end bracket before attaching the finial.