


Installing a Handcrafted Curtain Pole.


JONES
since 1909

1

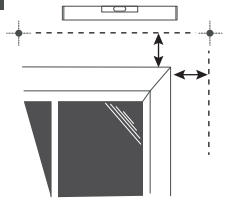

Position bracket fixing plates at least 10cm either side and above of the window recess and also measure equally between the two brackets for the centre bracket if your poles is over 2 metres in length. A spirit level is recommended.


2

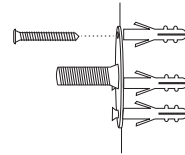

Drill holes (5mm) accordingly and fix bracket fixing plates to the wall using the wall plugs and screws provided (wall plugs are suitable for solid walls only).

3a


Standard Bracket

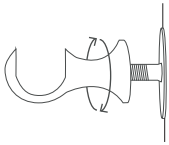

Screw the brackets onto the wall fixing plates with the cups facing upwards.


3b

Acanthus Bracket

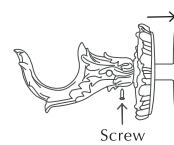


Install the fixing plates to the wall and slide the Bracket onto the post of the fixing plate (Please do not twist). Tighten with grubscrew to grip the post.

4

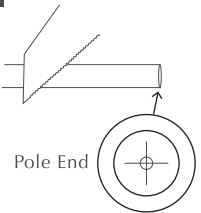


Cut the pole to the overall length required remembering to include the length of the finials in your calculation. If you need to cut the length of a two piece pole set you need to cut equal amounts off each pole at the finial end.

5

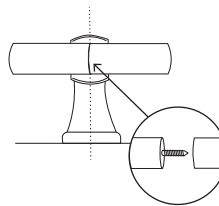


A double ended screw is provided to connect to two pole parts, the central bracket will cover the join. The cut ends will have to be re drilled to fix the finials, please use the template provided to ensure the drill hole is central.

6

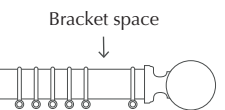

Slide the rings onto the pole ensuring that equal rings are either side the centre bracket (If used), one ring should be trapped between the end bracket and the finial to hold the curtain in place.

7

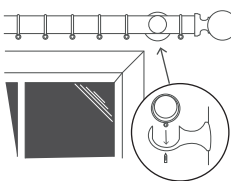

Lower the pole onto the brackets, to secure the pole to the brackets please insert the fixing screw into the base of the bracket and tighten until firm.

Curtain Pole 3mm Drill Template

