


Silent Gliss® 6290 Fitting Instructions

Ceiling Fix

IMPORTANT PLEASE READ

Product Information


Recommended fixing points



Important: when installing system 6290 with the intention of reducing the opportunity of self harm, Silent Gliss recommend the following:

- The first and final fixings must be no more than 1cm in from the ends of the profile.
- If fixing to a batten, ensure the profile does not project past the edge of the batten.
- If fixing to uneven wall surfaces (with or without battens), use a sealant or similar compound around the batten/track to ensure no gaps remain.

Safety release function

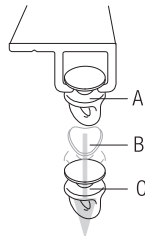


- A: Gliders can easily be clicked into profile
B: Glider deforms under pressure
C: Release under following pull weights:
Glider 6148 (yellow for release between 4-6kg pull);
Glider 6149 (blue for release between 8-10kg pull)

6021/6290 system can assist in the prevention of self harm in hospitals, schools and psychiatric situations. Please see specific pull out weights on individual gliders. Please also note that the longer the individual track and the more gliders used, the cumulative total pull-out weight when in a stacked position will increase and therefore support more weight.





A risk assessment of the area should always be carried out.

Silent Gliss® 6290 Fitting Instructions

Ceiling Fix

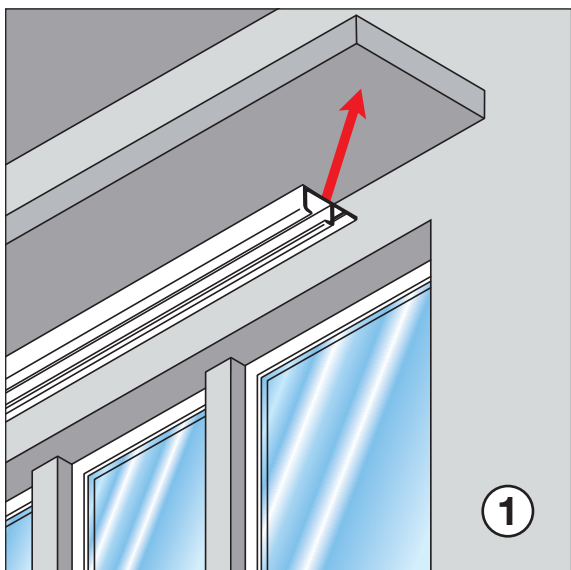

- If fixing to a batten, ensure the profile does not project past the edge of the batten.
- If fixing to uneven wall surfaces (with or without battens), use a sealant or similar compound around the batten/track to ensure no gaps remain.

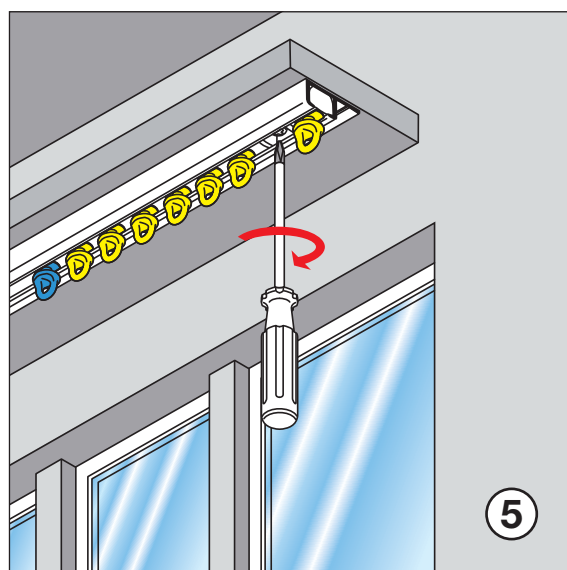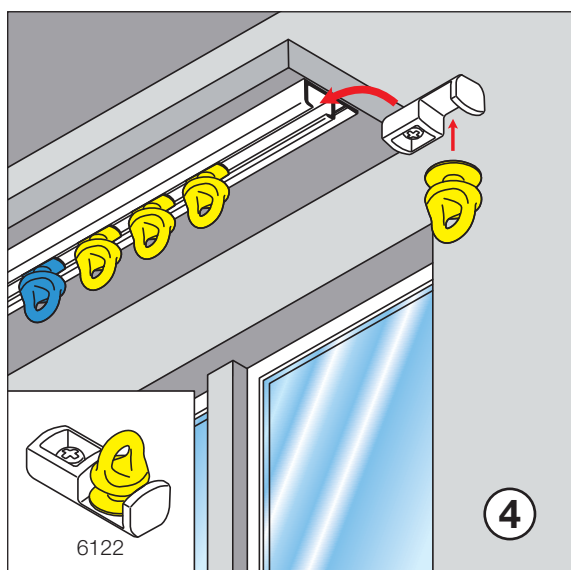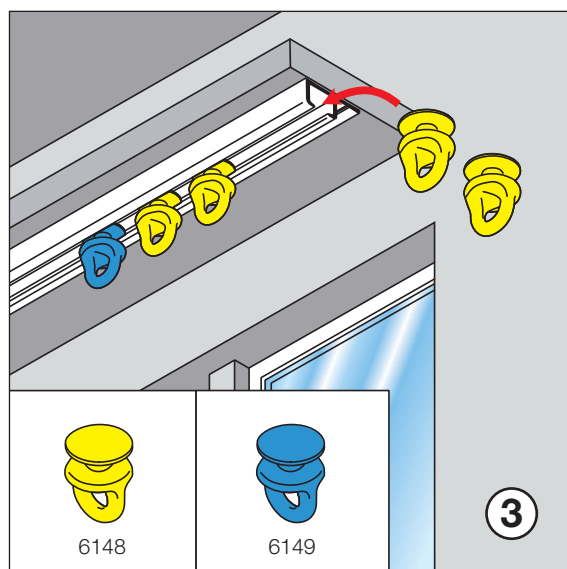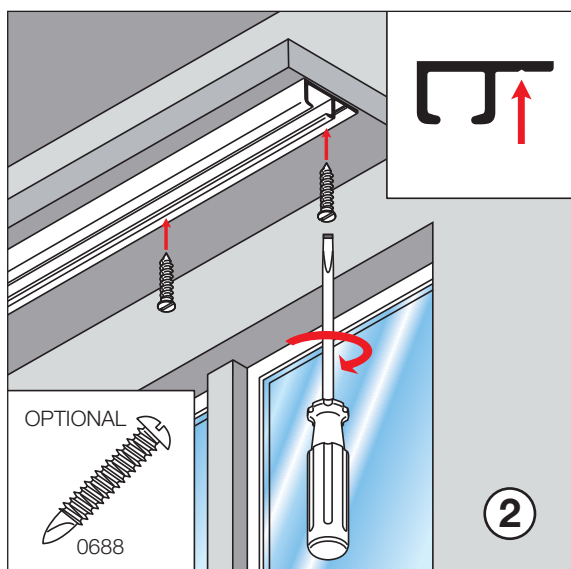

Silent Gliss Limited

Pyramid Business Park, Poorhole Lane, Broadstairs, Kent CT10 2PT
 Telephone: 01843 863571 Fax: 01843 864503
 E-mail: info@silentgliss.co.uk www.silentgliss.co.uk